

Light Controls



1 - Turns lights ON

2 - Turns lights OFF

Scene 1 - 75% brightness

Scene 3 - 50% brightness



Scene 2 - Dims for projector

Scene 4 - 25% brightness

▲ increase brightness

▼ decrease brightness

Note:

- The default brightness level is 75%.
- Scene 2 should be the best setting for using the projector.
- The lights will turn off if the sensor does not detect movement and/or sound in the room for an extended period. If the lights turn off while you are in the room, you have 10 seconds to make noise and/or waive your hand to trigger the sensor and make the lights come back on. After 10 seconds you will have to turn the lights back on using one of the switches.